


# MICRO SPIN AL500

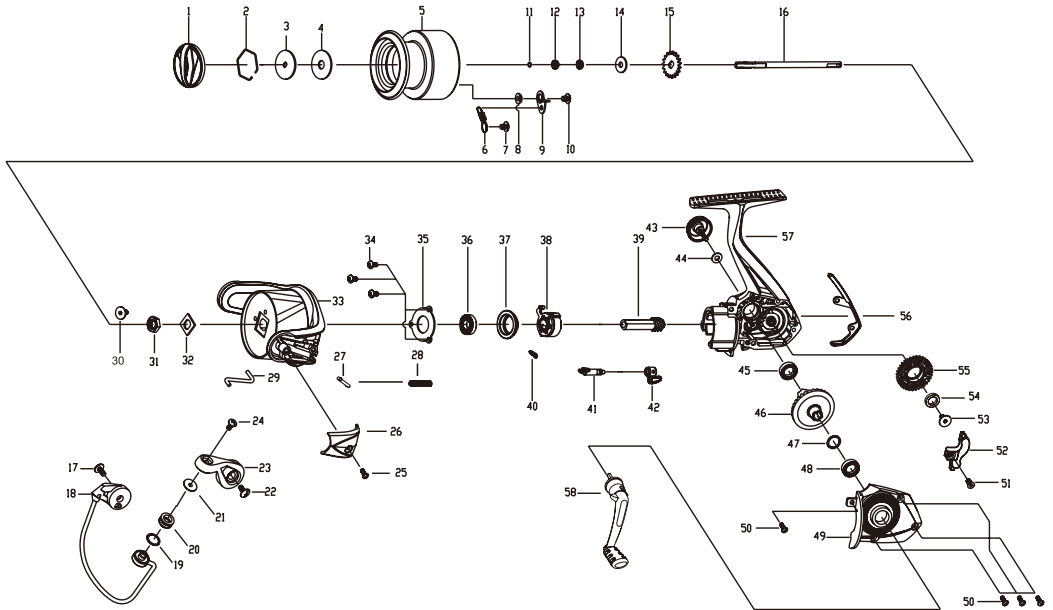

## KEY

### NO. Parts name

- 1 DRAG KNOB ASSY
- 2 RETAINER RING
- 3 WASHER
- 4 KEY WASHER
- 5 SPOOL ALUM ASSY
- 6 CLICK SPRING
- 7 SCREW
- 8 BUSHING
- 9 CLICK GEAR
- 10 SCREW
- 11 "O" WASHER
- 12 SPOOL BEARING
- 13 SPOOL BEARING
- 14 CLICK GEAR WASHER
- 15 CLICK GEAR
- 16 MAIN SHAFT
- 17 SCREW
- 18 BAIL ASSY
- 19 WASHER
- 20 LINE ROLLER
- 21 LINE ROLLER WASHER
- 22 SCREW
- 23 BAIL ARM
- 24 SCREW
- 25 SCREW
- 26 ROTOR COVER
- 27 BAIL LEVER
- 28 SPRING
- 29 KICK LEVER

## KEY

### NO. Parts name

- 30 SCREW
- 31 NUT
- 32 WASHER
- 33 ROTOR
- 34 SCREW
- 35 BALL BEARING RETAINER
- 36 BALL BEARING
- 37 BALL BEARING HOLDER
- 38 ONE WAY CLUTCH BEARING
- 39 PINION GEAR
- 40 SPRING
- 41 ANTI-REVERSE LEVER
- 42 ANTI-REVERSE BUTTON
- 43 HANDLE SCREW CAP
- 44 "O" RING
- 45 BALL BEARING
- 46 DRIVE GEAR
- 47 WASHER
- 48 BALL BEARING
- 49 BODY COVER
- 50 SCREW
- 51 SCREW
- 52 SLIDER
- 53 SCREW
- 54 BUSHING
- 55 OSCILLATION GEAR
- 56 REAR COVER
- 57 BODY
- 58 HANDLE ASSY